



**Application Note**

# AS8510

## USB Interface Board

## Content Guide

1	General Description .....	3
2	Getting Started .....	3
3	Hardware Description.....	3
4	Configuration.....	5
4.1	Supply and Logic Voltage .....	5
4.2	LIN Enable .....	5
4.3	Firmware Update.....	5
4.3.1	JTAG .....	5
4.3.2	USB.....	5
5	Contact Information.....	9
6	Copyrights & Disclaimer.....	10
7	Revision Information .....	11

## 1 General Description

This document describes the USB Interface Board which creates the link between our demo Boards and the USB Interface on the PC side.

This demo Board is used in conjunction with a number of different demo boards.

It supports SPI, I2C, UART, CAN and LIN as well as normal GPIO Interfaces and passed them onto USB Port.

The Protocol to the PC side is AMS-Stream via USB-HID and the appropriate driver, which is built-in in modern Operating Systems.

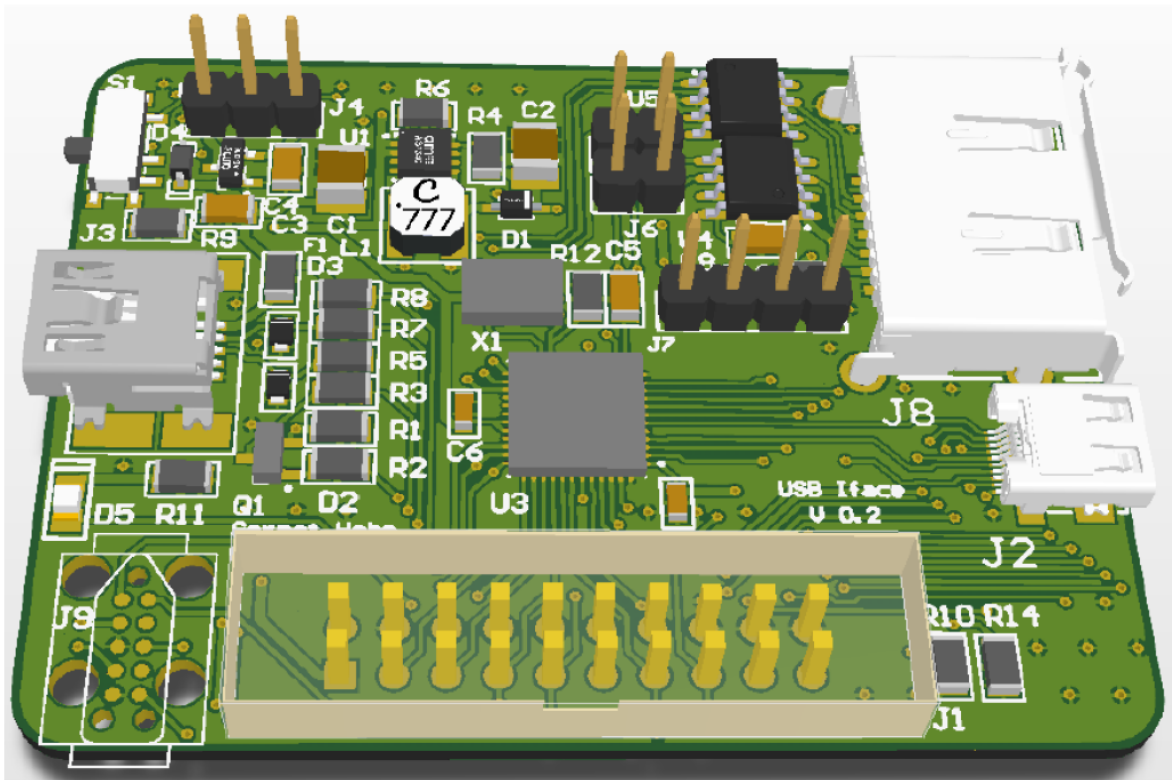


Figure 1: USB Interface Board

## 2 Getting Started

As this Interface Board is for a multitude of demos, there is no general setup procedure. Typically, you would install the Software of the Demo Board you are using, and then select the appropriate Interface voltage on the USB Interface Board as described in Chapter 4.1. Afterwards you connect the Demo Board via the HDMI or eSATA Cable and then the USB Interface board to the Computer via a USB cable. Important for normal operation the switch S1 has to point away from the left top edge otherwise the MCU will enter Firmware Update mode.

## 3 Hardware Description

The USB Interface Board is powered via J3 the USB Connector. It can run on 5V or 3.3V, which is selectable via J4.

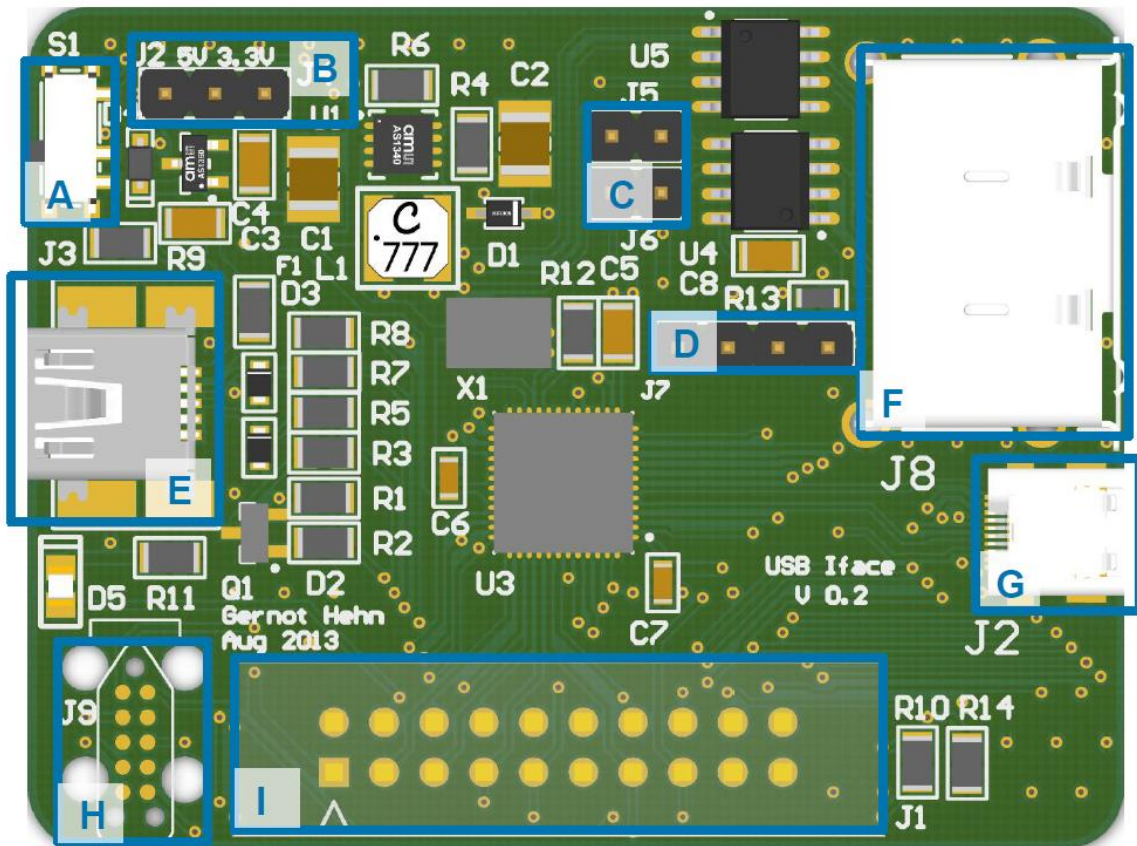


Figure 2: PCB Top Side Diagram

Table 1: Connection Diagram

Label	Name	Designator	Description	Info
A	PROG_SWITCH	S1	Program Switch	Switch to enable Firmware Upload via USB
B	V_SELECT	J4	Voltage Selector	Selects between 3.3V and 5V supply and logic
C	LIN_EN	J5 / J6	Lin Enable	Jumper to enable LIN Interface bridge from left to right
D	UART	J7	Uart Connector	Allows to connect Bluetooth UART Interface
E	USB	J3	Usb Connector	Connects to the PC
F	CAN / LIN	J8	Automotive Interface Connector	Interfaces to the CAN and LIN Bus and provides 12V
G	SPI / I2C / UART / GPIO	J2	Serial Interface Connector	Interfaces to the Standard Serial Protocols
H/I	JTAG	J1/J9	JTAG Programming Connector	Allow to Program and debug the chip. J9 is a Tag-Connect

## 4 Configuration

### 4.1 Supply and Logic Voltage

The Supply and Logic voltage is configured by J4. Placing a jumper on the left two of the three pins will select 5V (which is required e.g. for the AS8506 demo boards). Placing the jumper in on the right two pins will select 3.3V operation (which is e.g. required for the AS8510).

### 4.2 LIN Enable

To enable the LIN Interface two jumpers have to be placed on J5 and J6. This will disable one of the two serial Interfaces and redirect it to the LIN Transceiver.

### 4.3 Firmware Update

#### 4.3.1 JTAG

The Firmware can be updated and changed either via the JTAG Interface which is accessible either via the standard 20 pin JTAG Connector J1 (which by default is not populated) or via the 10pin tag-connect plug J9 (<http://www.tag-connect.com/TC2050-IDC>)

#### 4.3.2 USB

The Microcontroller has an integrated bootloader, which allow software update via USB. This can be triggered by placing the Switch S1 in direction of the left top corner and then plugging in the USB cable. This will enumerate a new Serial Device, which can then be programmed via the Flash USB Direct Programmer (<http://www.spansion.com/Support/microcontrollers/developmentenvironment/Pages/usb-direct-download.aspx>)

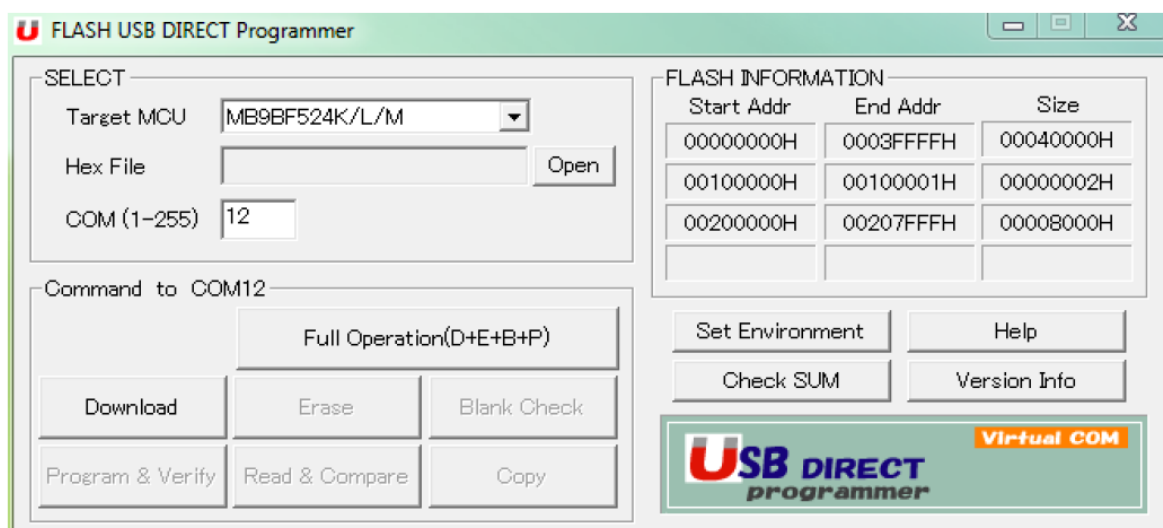


Figure 3: FLASH Usb Direct Programmer GUI

Be sure to select MB9BF524K/L/M as Target MCU and the hex file you want to upload. Then select the correct com Port which the Microcontroller enumerated to and click **Full Operation**

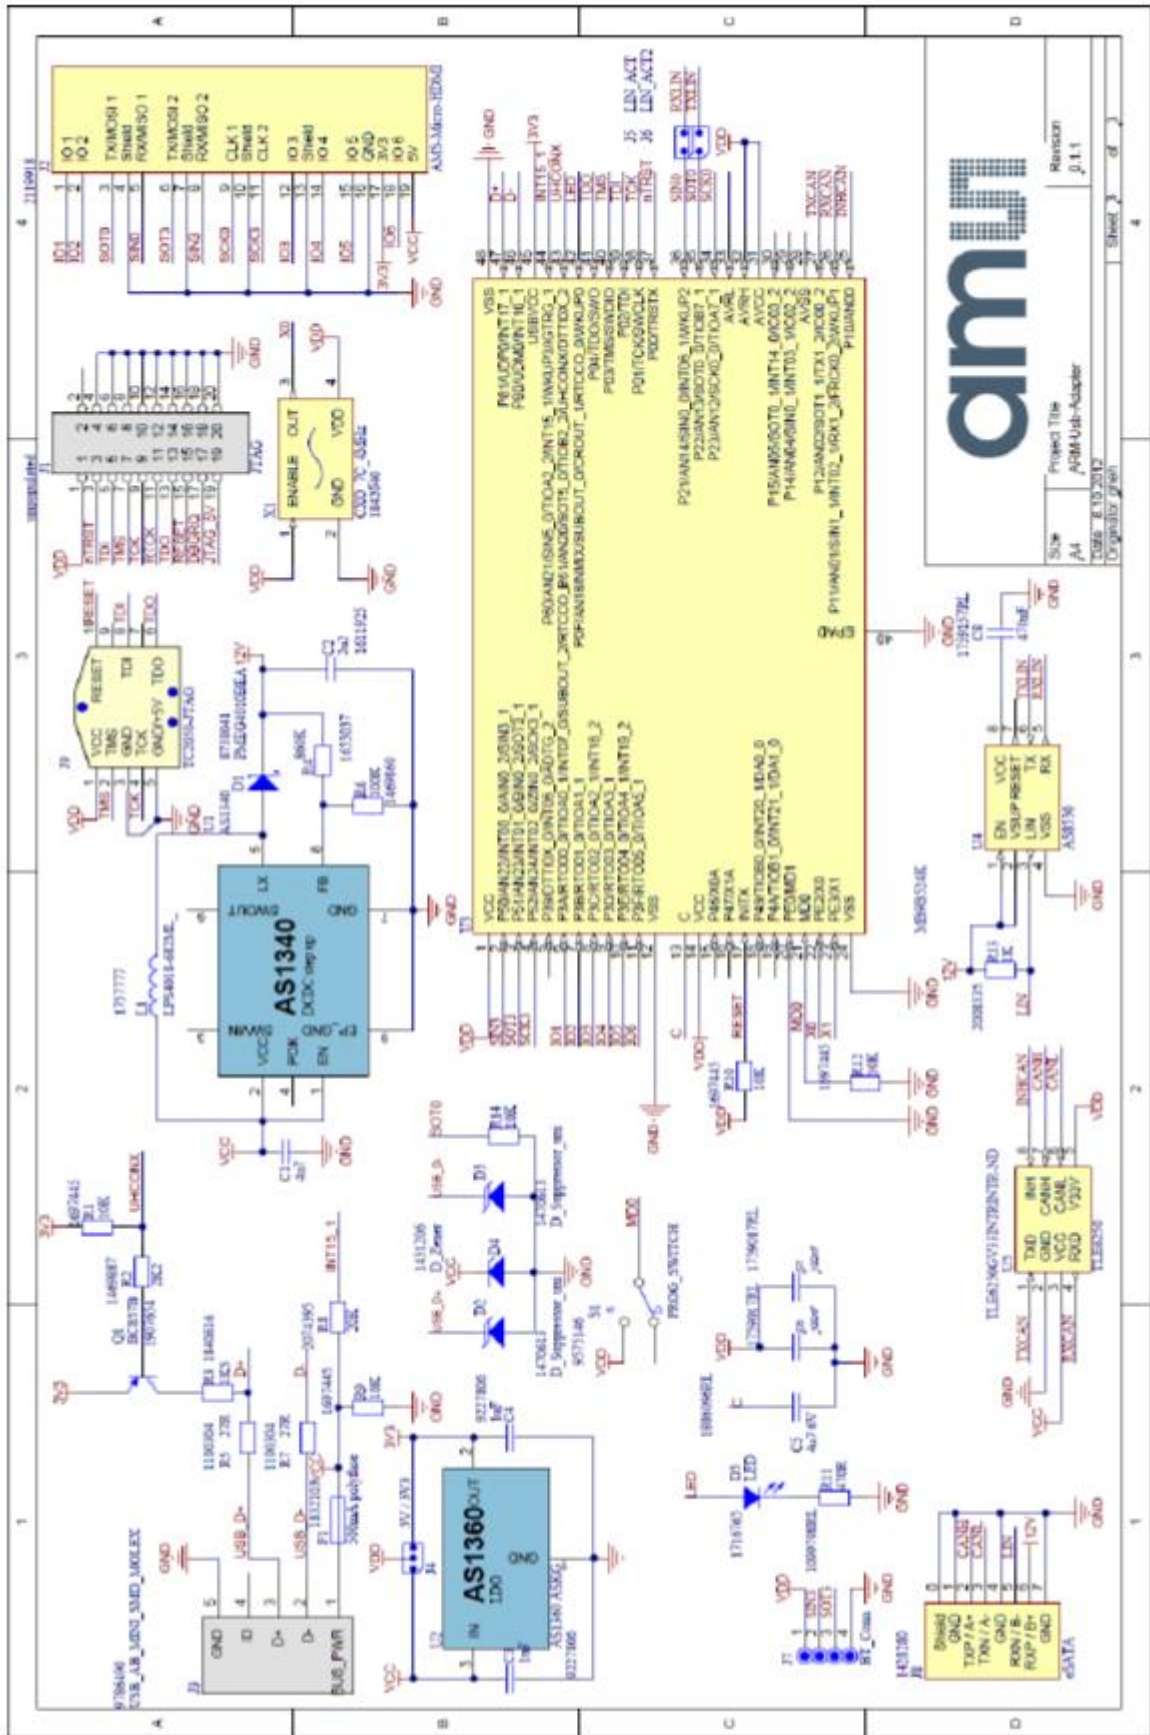


Figure 4: Schematic

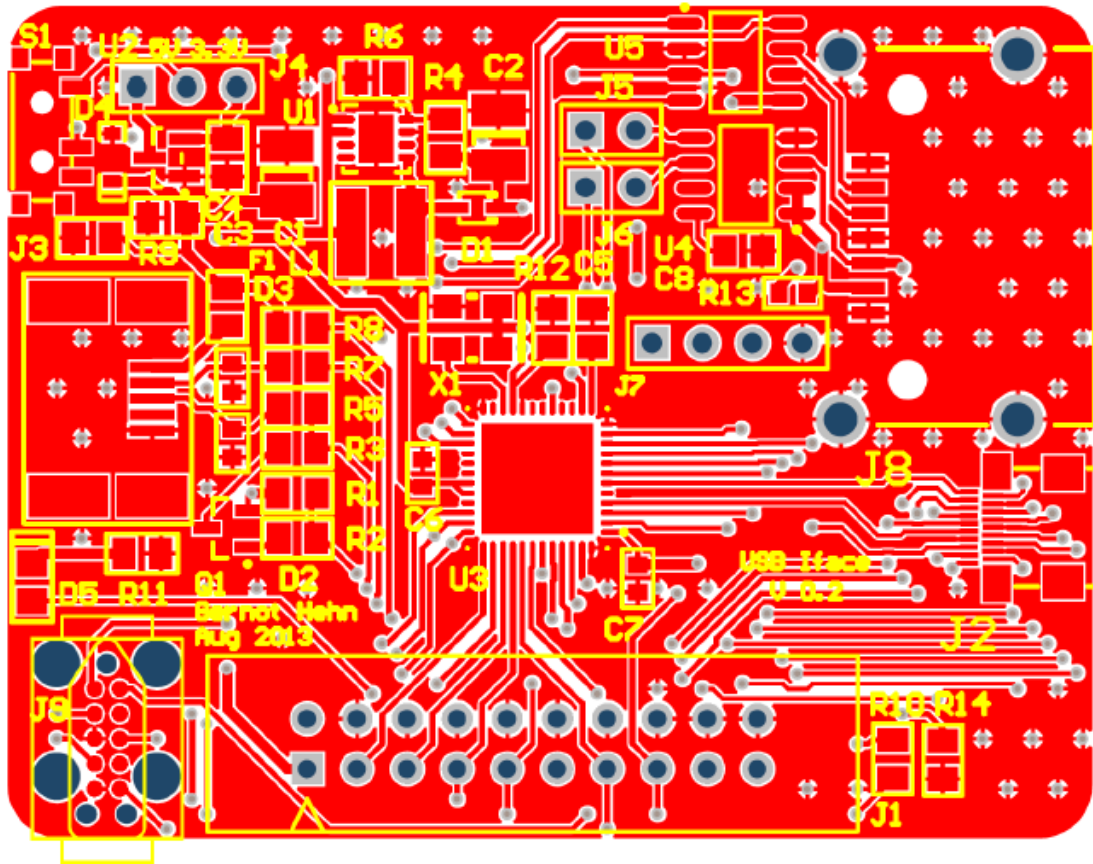


Figure 5: Top PCB Side

Bill of Materials		ARM-Usb-Adapter				
Company:		ams AG				
Originator:		ghch				
PCB Name:		ARM-Usb-Adapter				
PCB Version:		0.1.1				
Report Date:		8.10.2012				
#	Designator	Comment	Description	Manufacturer	Manufacturer Part Number	Quantity
1	C1	4u7	Ceramic Chip Capacitor - Standard	MULTICOMP	MCCA000570	1
2	C2	2u2	Ceramic Chip Capacitor - Standard	TAIYO YUDEN	GMK325B.225KN-T	1
3	C3	1uF		KEMET	C0805C105Z4VA-CTU	1
4	C4	1uF		KEMET	C0805C105Z4VA-CTU	1
5	C5	4u7 8V		JOHANSON DIELECTRICS	PR3R15K475KV4E	1
6	C6	100nF		MULTICOMP	MCCA000160	1
7	C7	100nF		MULTICOMP	MCCA000160	1
8	C8	470nF		MULTICOMP	MCCA000287	1
9	D1	PMEG4010BEA		ROXP	PMEG4010BEA	1
10	D2	D_Suppressor_uml		COOPER BUSSMANN	0803ESDA-TR1	1
11	D3	D_Suppressor_uml		COOPER BUSSMANN	0803ESDA-TR1	1
12	D4	D_Zener		ON SEMICONDUCTOR	MMBZ2V811G	1
13	D5	LED		MULTICOMP	OV3-0803	1
14	F1	500mA polyfuse	Fuse			1
15	J1	JTAG		MULTICOMP	MO8A 12-2334	1
16	J2	AMS Micro-HDMI				1
17	J3	USB_AB_MINI_SMD_MOLEX		MOLEX	56579-0579	1
18	J4	5V / 3/3				1
19	J5	LIN_ACT				1
20	J6	LIN_ACT2				1
21	J7	BT_Conn				1
22	J8	eSATA				1
23	J9	TC2050-JTAG	TC2050 SWD CONNECTOR DNP			1
24	L1	LPS4018-6R2M_	Inductor	NXP	PMEG4010CEJ115	1
25	Q1	BC957B	PNP General-purpose Transistor	NXP	BC957BW	1
26	R1	10K		TE CONNECTIVITY / NEOHM	CFD035B10KE1	1
27	R2	2K2		VISHAY DURALORC	CRCW08052K20-KEA	1
28	R3	1K5		YA OED (PHYCOMP)	FED805DR-071K5L	1
29	R4	880K		VISHAY DURALORC	CRCW0805880K-KEA	1
30	R5	27R		WELWYN	WCR0805-27RF1	1
31	R6	100K		VISHAY DURALORC	CRCW0805100K-KEA	1
32	R7	27R				1
33	R8	30K		MULTICOMP	MCSR05X0302-TL	1
34	R9	10K		TE CONNECTIVITY / NEOHM	CFD035B10KE1	1
35	R10	10K		TE CONNECTIVITY / NEOHM	CFD035B10KE1	1
36	R11	470R		WELWYN	WCR0805-470RF1	1
37	R12	10K		TE CONNECTIVITY / NEOHM	CFD035B10KE1	1
38	R13	1K		BOURNS	CR0803-FX-1001ELF	1
39	R14	10K				1
40	S1	PROG_SWITCH		C & K COMPONENTS	PCM12SMTR	1
41	U1	AS1340	50V, Micropower, DC-DC Boost Converter			1
42	U2	AS1380 ASXG	1.5uA Low-Power, LDO			1
43	U3	MB98324K				1
44	U4	AS3530	LIN SBC			1
45	U5	TLE6250		Infinicon Technologies	TLE6250G V33	1
46	X1	CXO_TC_4MHz		TXC	TC-4 100MBA-1	1
Approved			Notes			46

Figure 6: BOM



## 5 Contact Information

**Buy our products or get free samples online at:**

[www.ams.com/Products](http://www.ams.com/Products)

**Technical Support is available at:**

[www.ams.com/Technical-Support](http://www.ams.com/Technical-Support)

**Provide feedback about this document at:**

[www.ams.com/Document-Feedback](http://www.ams.com/Document-Feedback)

**For further information and requests, e-mail us at:**

[ams\\_sales@ams.com](mailto:ams_sales@ams.com)

**For sales offices, distributors and representatives, please visit:**

[www.ams.com/contact](http://www.ams.com/contact)

### Headquarters

ams AG

Tobelbader Strasse 30

8141 Premstaetten

Austria, Europe

Tel: +43 (0) 3136 500 0

Website: [www.ams.com](http://www.ams.com)

## 6 Copyrights & Disclaimer

Copyright ams AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Information in this document is believed to be accurate and reliable. However, ams AG does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

Applications that are described herein are for illustrative purposes only. ams AG makes no representation or warranty that such applications will be appropriate for the specified use without further testing or modification. ams AG takes no responsibility for the design, operation and testing of the applications and end-products as well as assistance with the applications or end-product designs when using ams AG products. ams AG is not liable for the suitability and fit of ams AG products in applications and end-products planned.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data or applications described herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

ams AG reserves the right to change information in this document at any time and without notice.



## 7 Revision Information

Changes from previous version to current revision 1-00 (2018-Jul-16)	Page
Initial version 1-00	

**Note:** Page numbers for the previous version may differ from page numbers in the current revision.  
Correction of typographical errors is not explicitly mentioned.