


Product Document

ams

Shaping the world with sensor solutions

Kumud Dey
June 2020

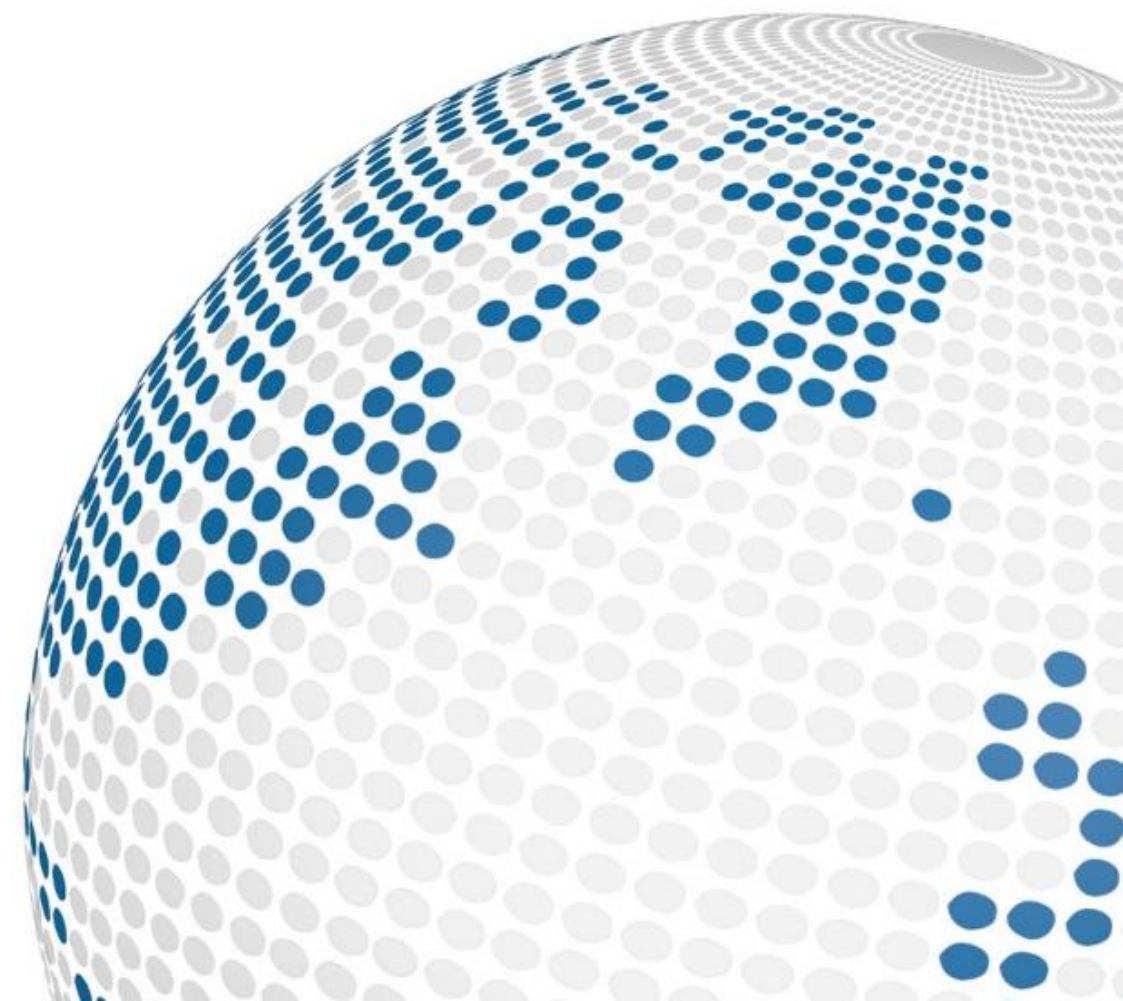

AS7030B Evalkit

User Guide

Contents

How to use


AS703X PC Software

Safety Requirements

FW Upgrade over USB

Contents of the AS7030B Evaluation kit


Evaluation kits main parts

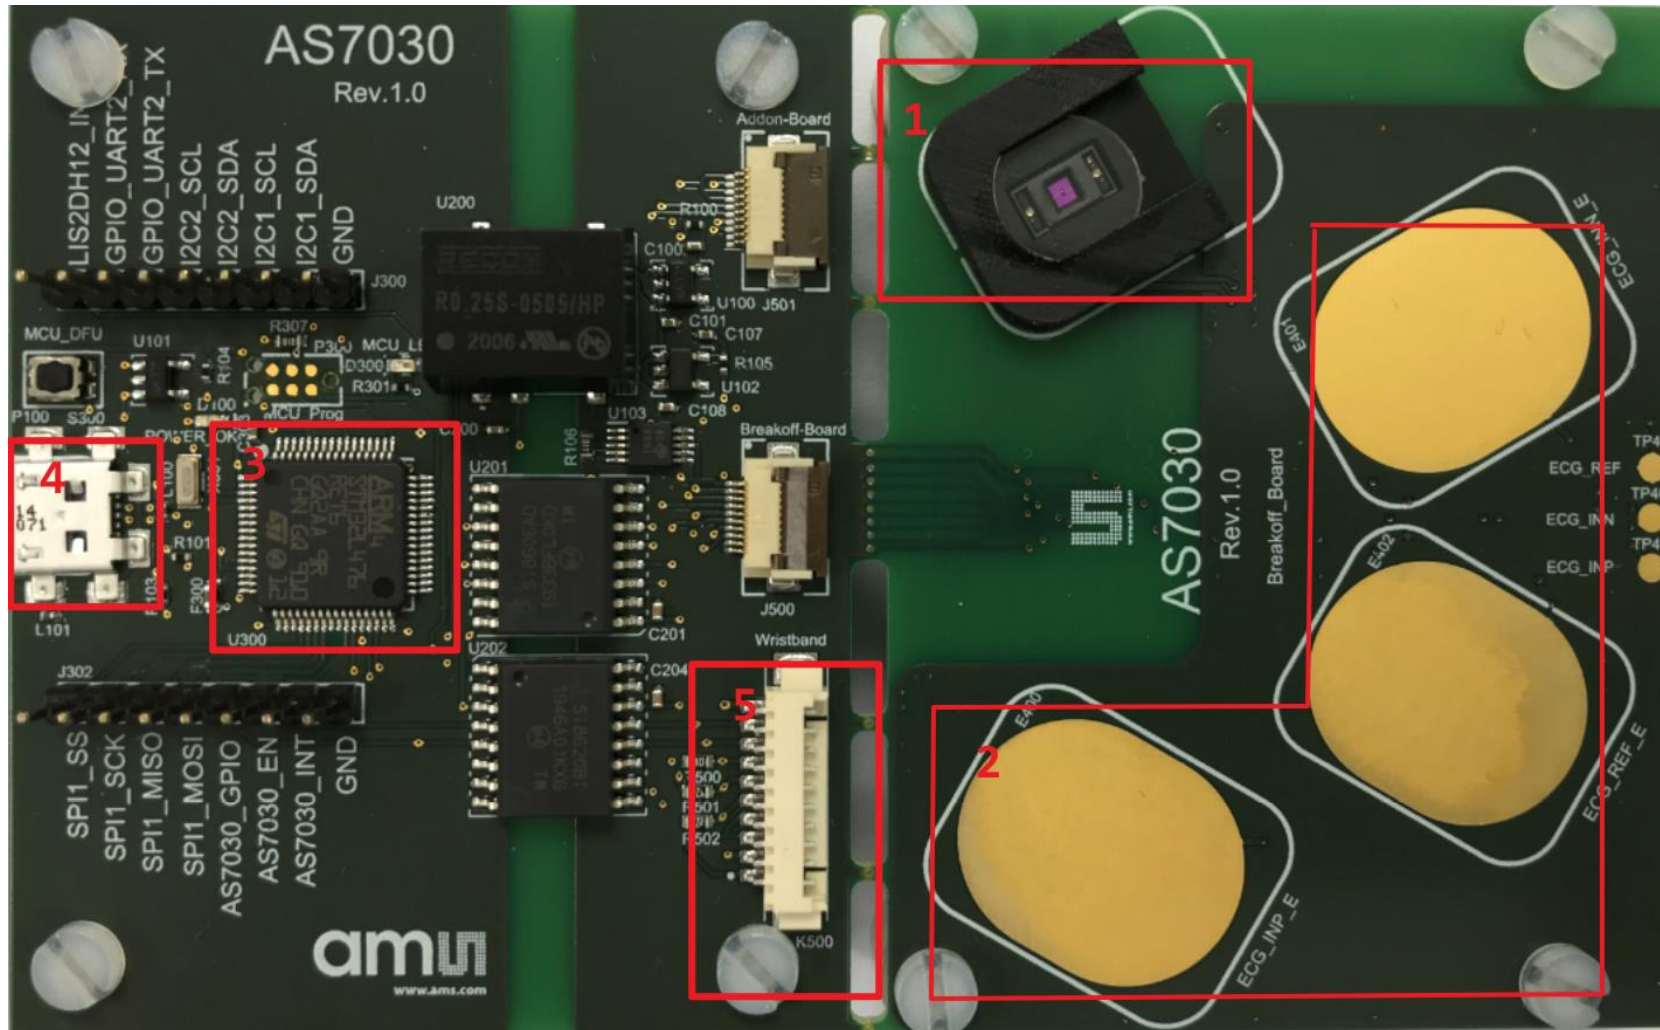

1. AS7030B Sensor
2. ECG electrodes pads
3. Microcontroller
4. USB connector
5. Connector to optional AS7030B Wristband

Setup

Getting Started

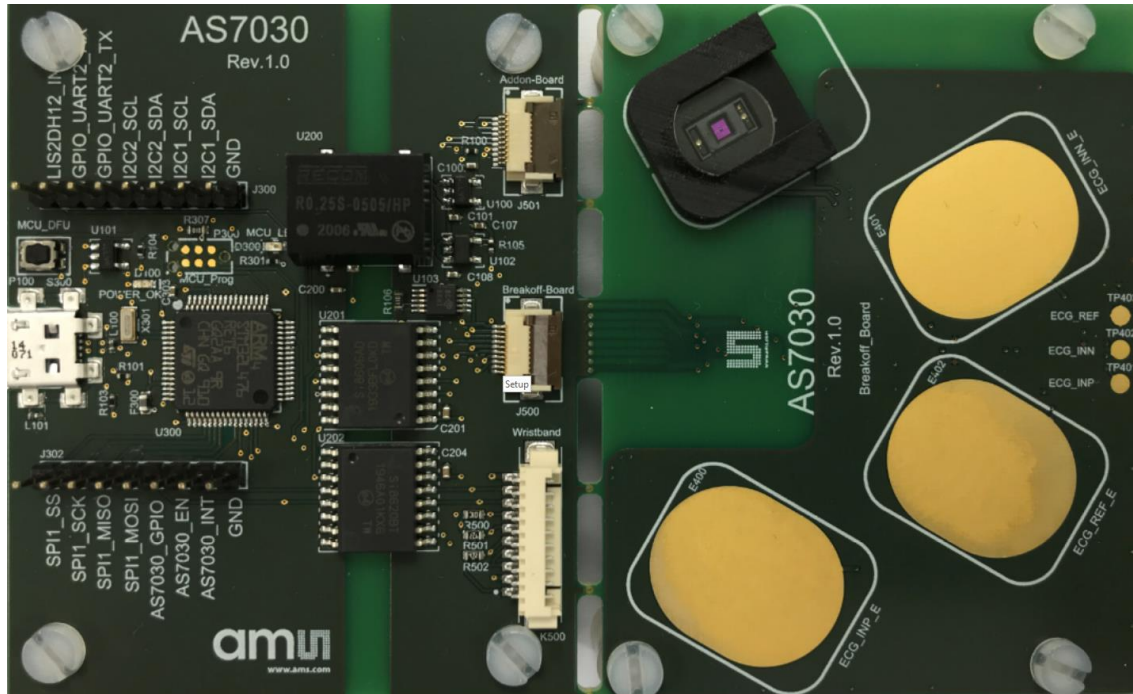

1. Download the Evalkit Software from <https://ams.com/AS7030B#tab/tools> or copy from the USB stick
2. Install the Evalkit Software
3. Optionally connect electrodes to the external electrodes connection
4. Connect the micro USB to USB cable to the board and plug it into your computer
5. The yellow LED will turn ON as soon as the board is powered
6. Start the client software

Note: For external ECG functionality customer needs to build their own cabling harness
The pinout of the electrode connection is as follows






Connector for External Electrodes
(Molex PicoBlade 53261-0471)

Pin 4 – ECG_INP
Pin 3 – ECG_INN
Pin 2 – ECG_REF
Pin 1 – GND

AS703x PC Software

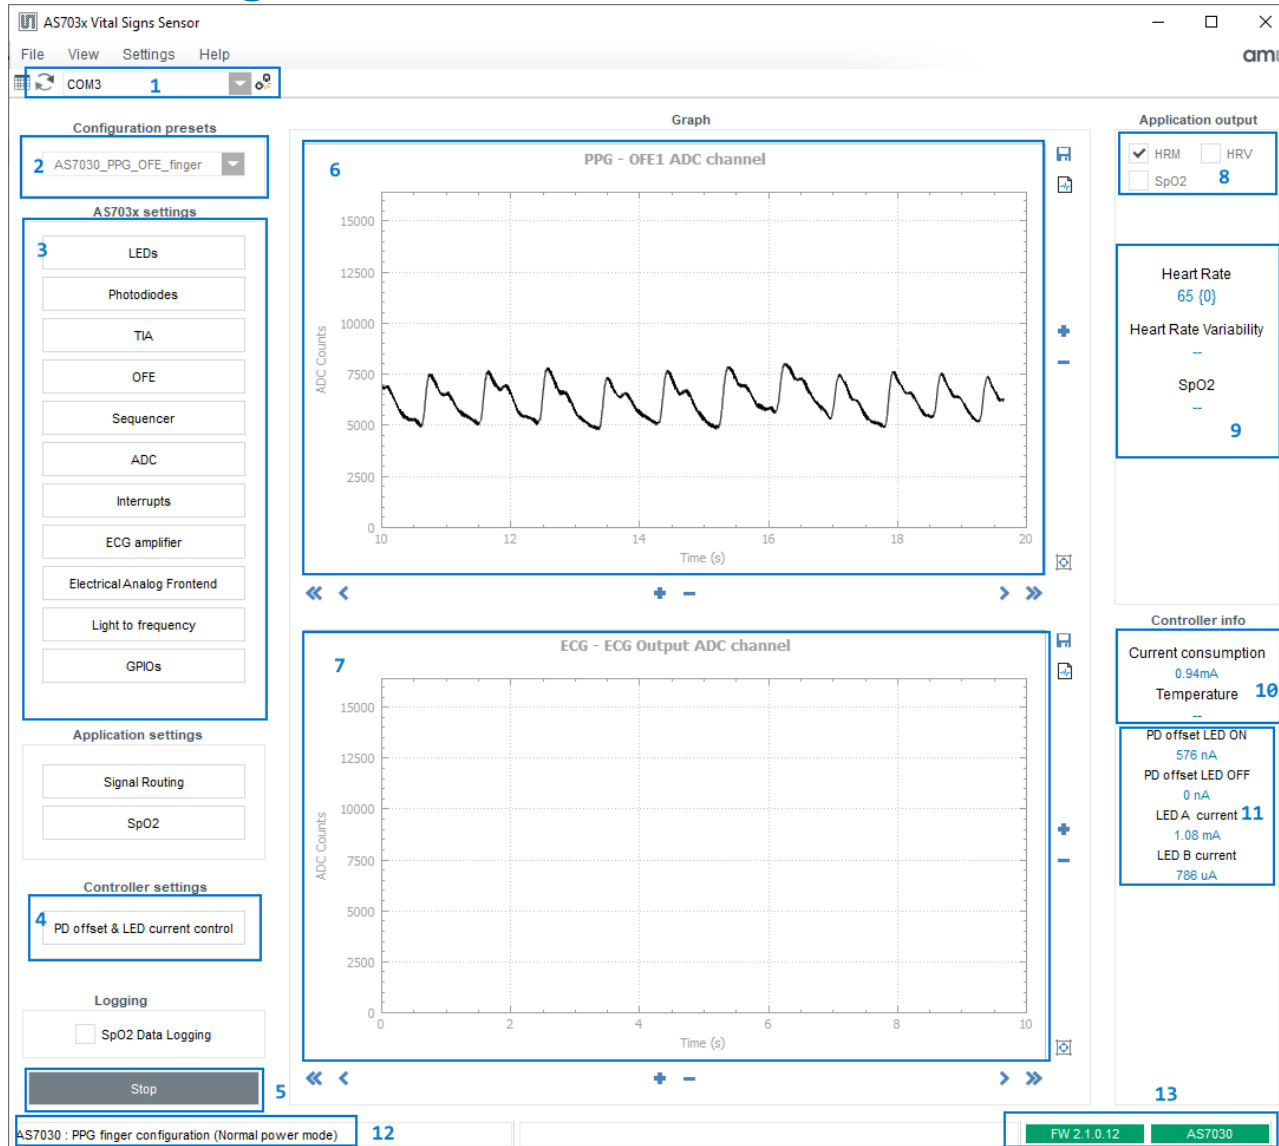Starting a PPG measurement






- Select the appropriate COM port name from the drop down box (1)
- Click the connect button 
- Connect button will change its icon to  upon successful connection
- The two status boxes on the bottom right side will turn green and show the FW number currently flashed on the board (13)
- Select **AS7030_PPG_OFE_Finger** from the built in configuration presets (2)
- Optionally check and change AS703x settings
- Start the measurement with a click on the **Start** button(5)
- Put the index finger on the AS7030B to measure the PPG signal
- The PPG waveform will be displayed in the PPG window of the GUI (6)
- The Heart Rate (HRM) will be displayed on the right hand side of the window (9)
- The numbers in curly brackets show how many seconds have passed since the last result was reported

*** SpO2 is not applied for AS7030B Eval Kit*

AS703x PC Software

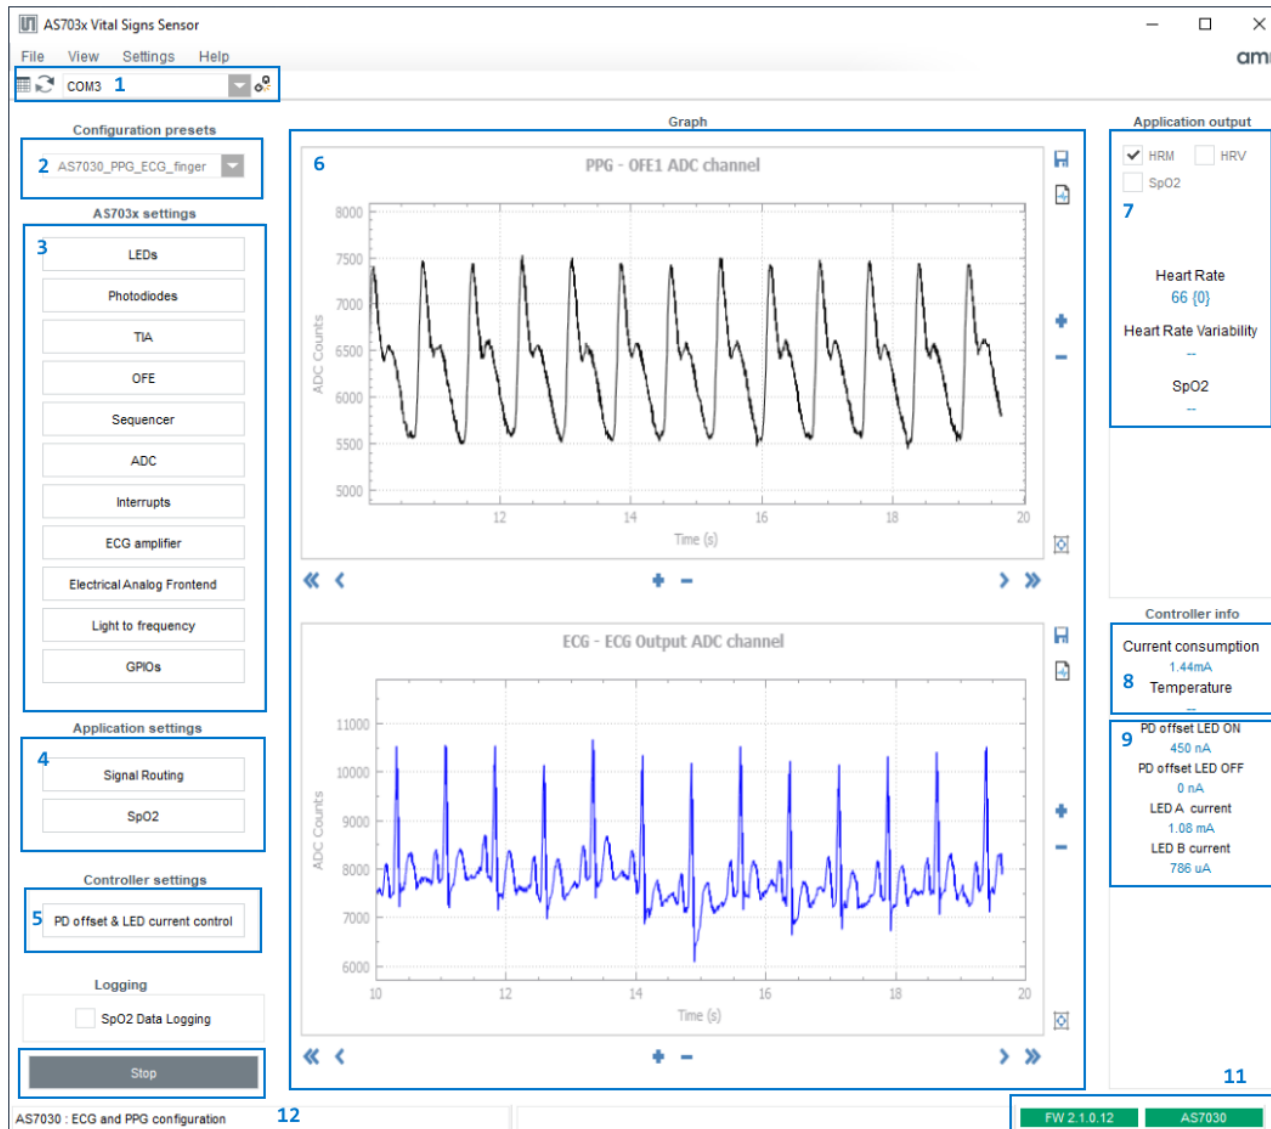Starting a combined PPG/ECG finger measurement



- Select the appropriate COM port name from the drop down box (1).
- Click the connect button .
- Connect button will change its icon to  upon successful connection.
- The two status boxes on the bottom right side will turn green and shows the FW version and current board's part number (11).
- Connect ECG electrodes to the electrode connection if applied.
- Select **AS7030_PPG_ECG_finger** from the built in configuration presets (2).
- Optionally check and change AS703X settings(3).
- Start the measurement with a click on the **Start** button(12).
- The green AS7030B LEDs will turn on, Start button's caption will change to **Stop**.
- Put the index finger on the AS7030B and on-board electrode.
- The PPG waveform will be displayed in the PPG window of the GUI. (6)
- The ECG waveform will be displayed in the ECG window of the GUI. (6)

AS703x Signal optimization

Two settings have a major impact on signal strength and quality:

- LED current
- OFE gain
- TIA gain

LED current has a direct impact on signal strength with minimal impact on noise.

OFE gain will increase overall signal strength but also increase noise.

We recommend the following settings to begin with and start experimenting from there:


| Use case | LED current [mA] | OFE gain | TIA gain |
|------------------|------------------|----------|----------|
| Finger | 0.768 | 4-8 | 2M-3M |
| Light skin wrist | 2 | 8 | 7M |
| Dark skin wrist | 5 | 16 | 7M |

AS703x PC Software

Saving and loading configuration

To save the current configuration settings, click on the **File** → **Save Configuration** menu. This will open the **Save Configuration File** dialog box. Enter file name and choose the file location, then click **Save**.

To load a previously exported configuration, click on the **File** → **Load Configuration** menu. This will open the **Select Configuration File** dialog box. Select the configuration file from which to load settings and click **Open**.

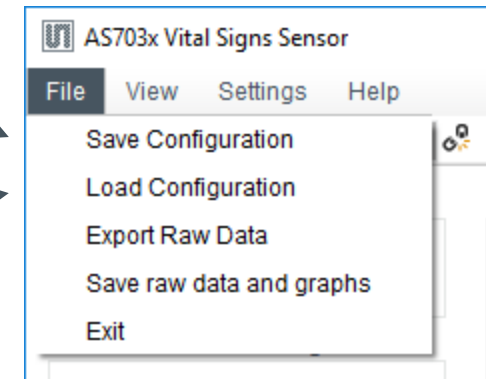

AS703x PC Software

Raw data logging and exporting

By default, during measurement the raw data from the AS703x is logged in memory. When a measurement is stopped, this data can be exported to a .csv file by clicking on the **File** → **Export Raw Data** menu and selecting the file location and file name in the **Save File** dialog box.

Raw data file format:


- First row has the column captions
- First column has the timestamp in **milliseconds**
- The rest of the columns contain the data from the enabled ADC channels

The screenshot shows the AS703x Vital Signs Sensor software interface. The 'File' menu is open, displaying options: 'Save Configuration', 'Load Configuration', 'Export Raw Data' (highlighted), 'Save raw data and graphs', and 'Exit'. Below the menu, a 'Table data log' window is visible, containing a 'Parsed data log' table and an 'FFO data log' table. The 'Parsed data log' table has columns for Timestamp, TIA, TIA2, TIA3, OFE1, SD1, OFE2, and SD2. The 'FFO data log' table has columns for Timestamp, Value, LSB, and MSB. At the bottom right of the 'Table data log' window, there are buttons for 'Save', 'Discard', and 'Close'.

| | Timestamp | TIA | TIA2 | TIA3 | OFE1 | SD1 | OFE2 | SD2 |
|----|-----------|-------|-------|------|------|-----|------|-----|
| 1 | 0.00000 | 15673 | 15305 | | 5189 | | | |
| 2 | 4.98000 | 11730 | 12709 | | 258 | | | |
| 3 | 9.96000 | 15707 | 15224 | | 255 | | | |
| 4 | 14.94000 | 11590 | 12836 | | 254 | | | |
| 5 | 19.92000 | 15731 | 15128 | | 254 | | | |
| 6 | 24.90000 | 11662 | 12768 | | 255 | | | |
| 7 | 29.88000 | 15609 | 15174 | | 257 | | | |
| 8 | 34.86000 | 11671 | 12988 | | 251 | | | |
| 9 | 39.84000 | 15668 | 15133 | | 255 | | | |
| 10 | 44.82000 | 11706 | 12925 | | 256 | | | |
| 11 | 49.80000 | 15699 | 15037 | | 258 | | | |
| 12 | 54.78000 | 11756 | 12922 | | 253 | | | |
| 13 | 59.76000 | 15570 | 15129 | | 256 | | | |
| 14 | 64.74000 | 11727 | 12921 | | 257 | | | |
| 15 | 69.72000 | 15521 | 15176 | | 255 | | | |
| 16 | 74.70000 | 11810 | 12919 | | 255 | | | |
| 17 | 79.68000 | 15594 | 14998 | | 255 | | | |
| 18 | 84.66000 | 11844 | 12945 | | 257 | | | |
| 19 | 89.64000 | 15545 | 15163 | | 255 | | | |
| 20 | 94.62000 | 11748 | 13000 | | 255 | | | |
| 21 | 99.60000 | 15460 | 12404 | | 260 | | | |



Safety compliance

The AS7030B Eval Kit is supplied by USB connection to the PC. In order to avoid a direct connection from the electrodes to the power grid, an IEC 60601-1 compliant RECOM DCDC converter (R0.25S-0505/H or R0.25S-0505/HP) is assembled on the board as well as isolator ICs for any other signals, which means that there is no physical connection between the break out part of the board and the power grid.

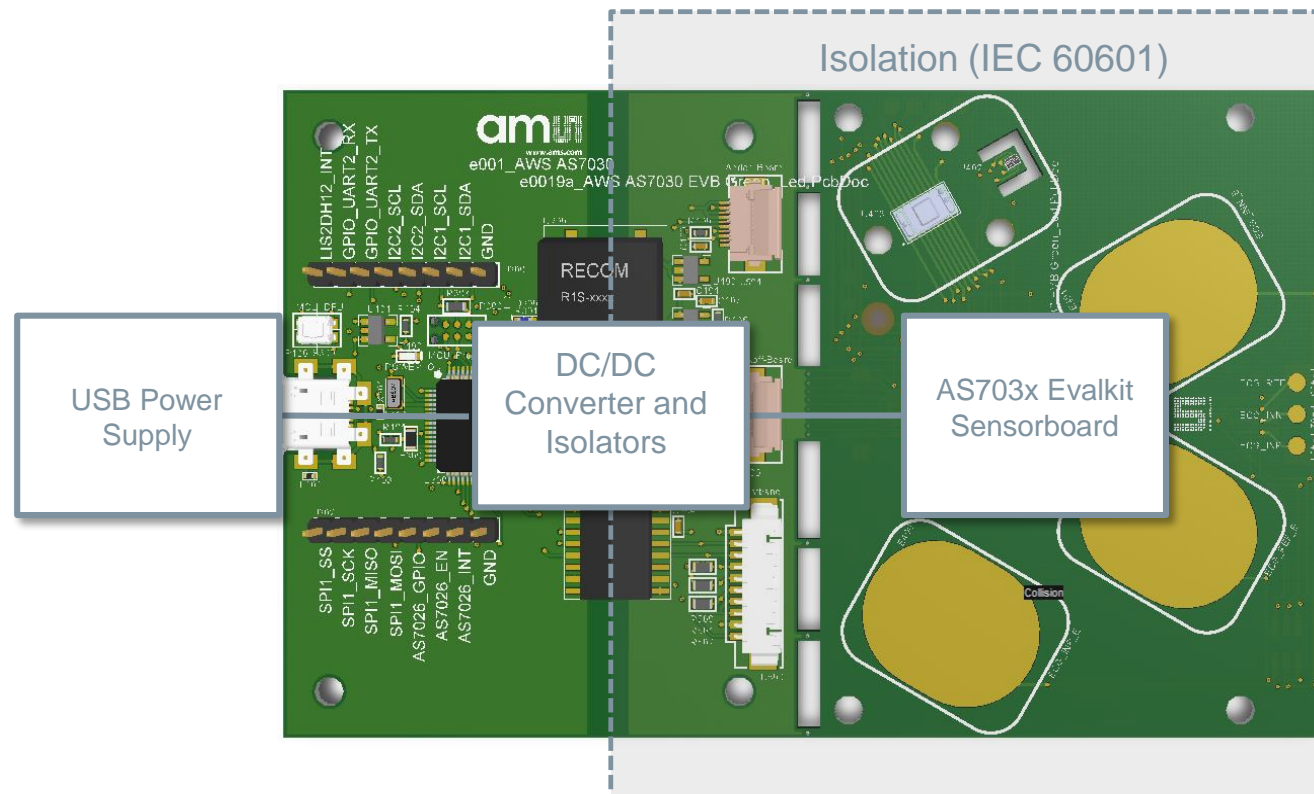

AS703x Firmware upgrade

Optional FW upgrade over USB

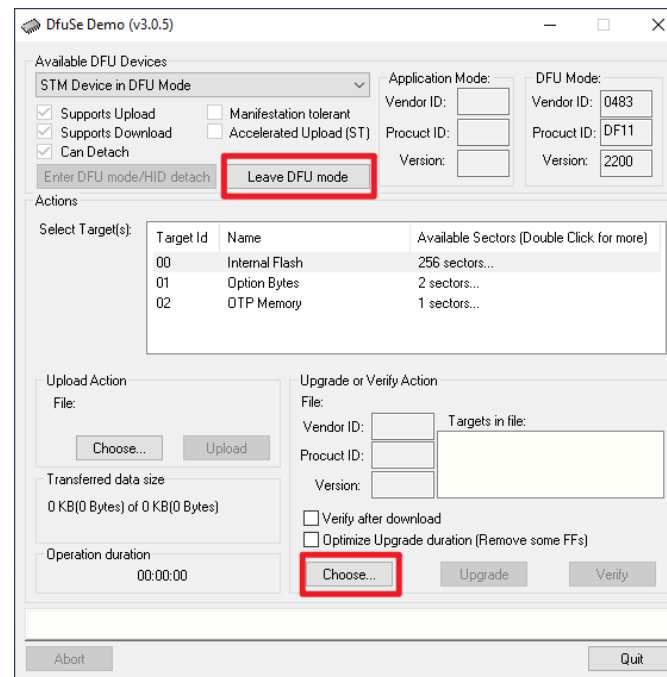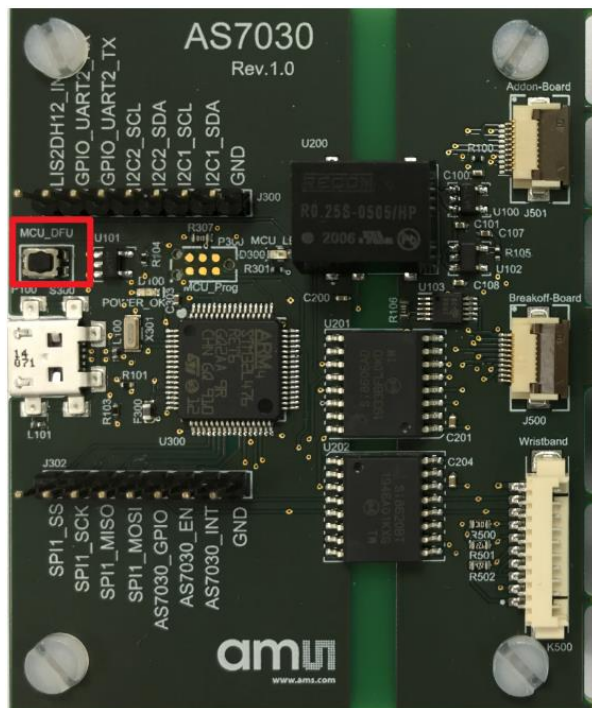

- Press and hold DFU taster on the board (next to the USB connector)
- Connect USB cable -> release DFU taster (The board is now in DFU mode)
- Start [DfuSeDemo.exe](#) from the folder \your SW install \ams\AS703x Vital Signs Sensor\extras\DFU
- In “Upgrade or Verify Action” ,Click on [Choose...](#), a window will pop-up
- Find the folder with the new firmware, select the FW and click [Open](#)
- Click [Upgrade](#)
- After FW upgrade, quit the DFU software by disconnecting the USB cable from the board or click “[Leave DFU mode](#)” button.
- Connect USB cable again, start the GUI. In the right bottom corner of the GUI, the new FW version will be shown.



Thank you!

Please visit our website
www.ams.com